

Important installation info.

Series F1/F2/T1
(fixed displacement pumps)

Changing direction of rotation

Note: Valid for series F1 only.
On series F2, the end cap must be replaced!

Example:

- A right hand (R.H.) rotating pump (a) should be changed to a left hand (L.H.) rotating pump (e).
- Follow illustrations (a) through (e).

