


Spare parts for standard TXV130/150 + version through shaft:

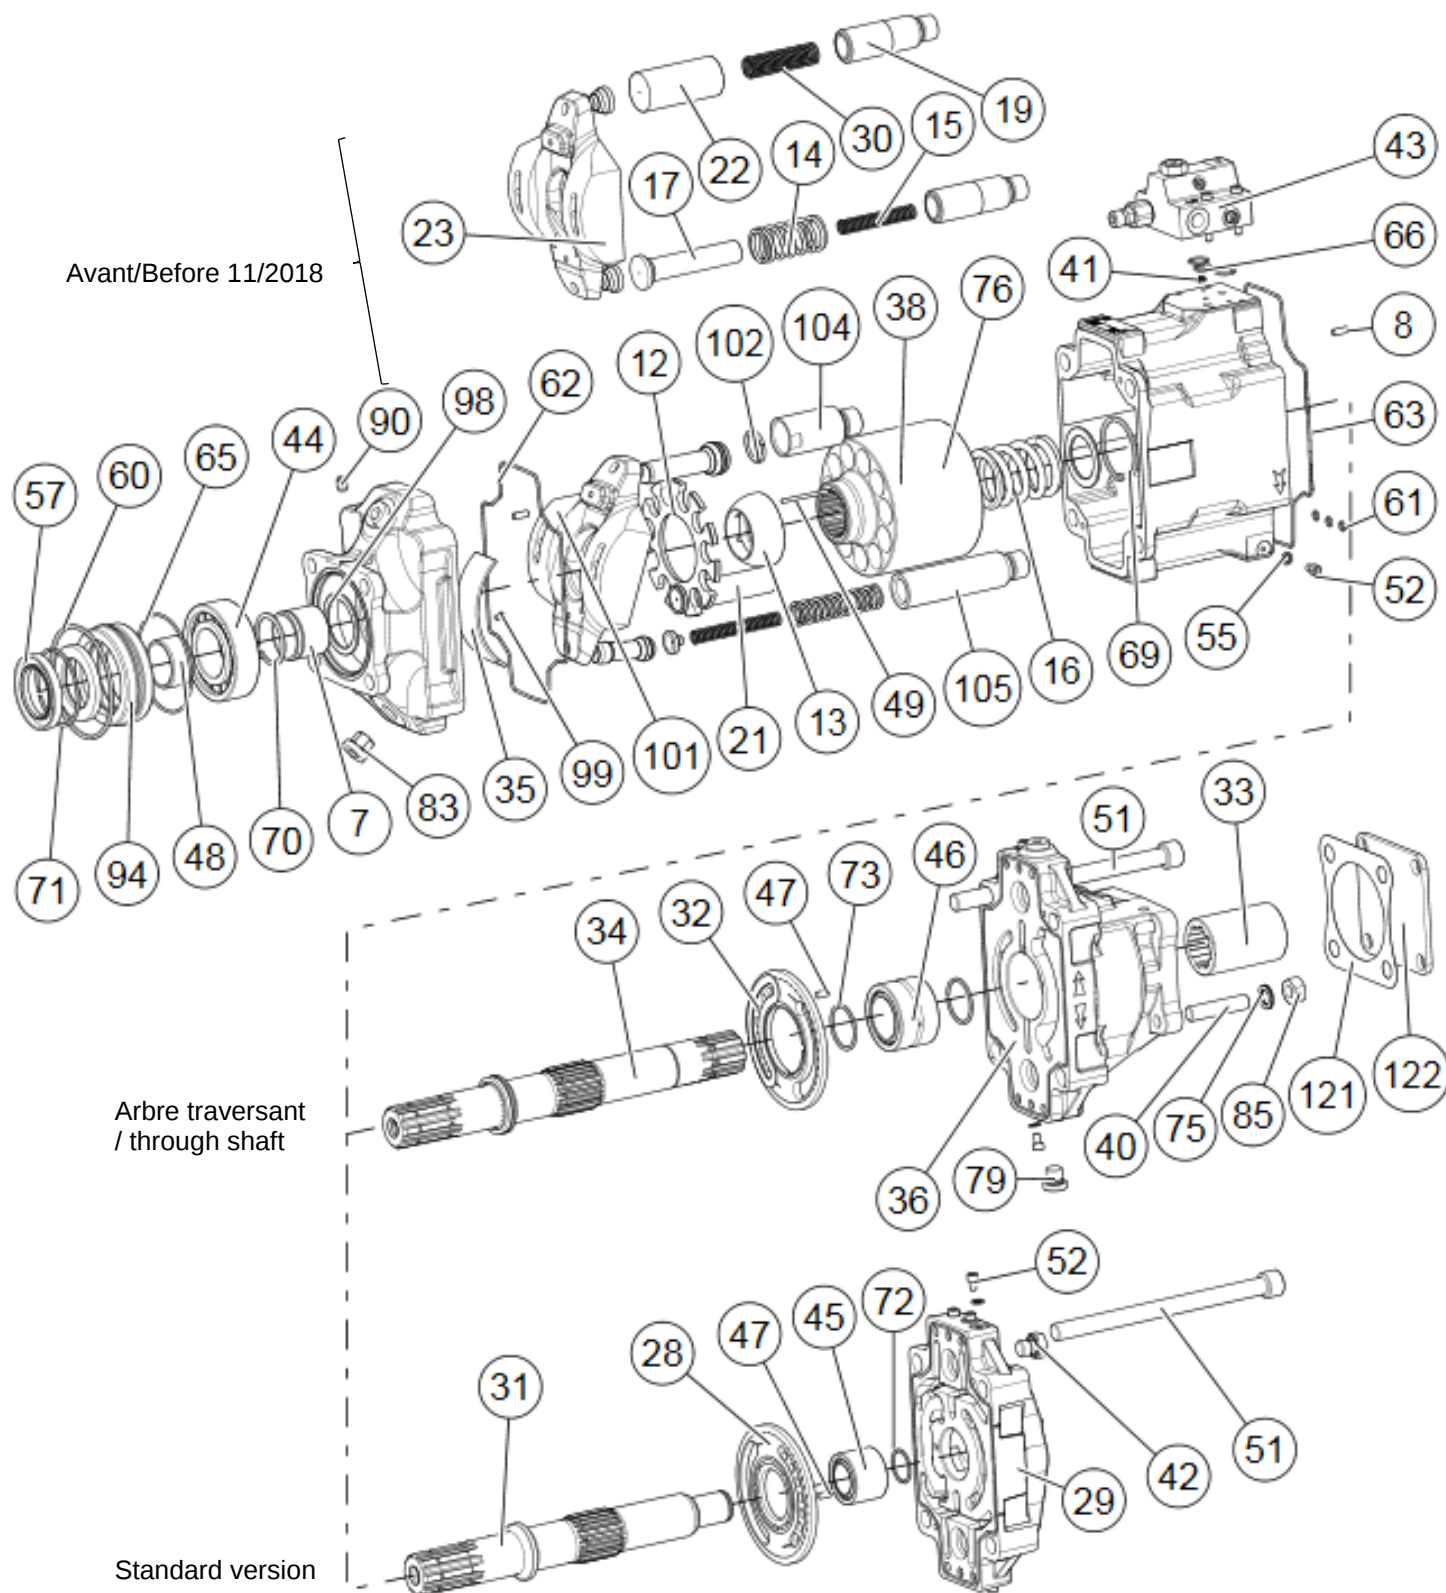

Reg	Designation	Qty
7	Douille / sleeve	1
8	Aiguille / Pin	4
12	Plaque de rappel / Retainer plate	1
13	Rotule / Ball bearing	1
14	Ressort / Spring	1
15	Ressort / Spring	1
16	Ressort / Spring	1
17	Vérin Ø18 / Piston Ø18	1
19	Support vérin / Piston support	2
21	Piston / Piston	11
22	Vérin Ø27 / Piston Ø27	1
23	Plateau incliné / Swash plate	1
28	Glance / Valve plate	1
29	Culasse / Back plate	1
30	Ressort / Spring	1
31	Axe / Drive shaft	1
32	Glance AT / AT valve plate	1
33	Manchon / Adaptor M/M	1
34	Axe AT / AT Drive shaft	1
35	Coussinet / Bearing shell	2
36	Culasse AT / AT back plate	1
38	Barillet / Cylinder barrel	1
40	Goujon M12 / M12 stud	1
41	Filtre / Filter	1
42	Bouchon G¼" / Plug G¼"	2
43	Asservissement LS / LS control	1
44	Roulement / Roller bearing	1
45	Roulement aiguille / Needle bearing	1

Reg	Designation	Qty
46	Roulement aiguille / Needle bearing	1
47	Rouleau / Pin	2
48	Bague / Bushing	1
49	Aiguille / Pin	6
51	Vis M14 / M14 Screw	4
52	Vis M5 / M5 screw	12
55	Bague BS / Bonded seal	9
57	Joint d'arbre FKM / FKM shaft seal	1
60	Joint torique / O-ring	1
61	Joint torique / O-ring	6
62	Joint torique / O-ring	1
63	Joint torique / O-ring	1
65	Joint torique / O-ring	1
66	Joint torique / O-ring	3
69	Jonc / Retainer ring	1
70	Jonc / Retainer ring	1
71	Jonc / Retainer ring	1
72	Jonc / Retainer ring	1
73	Jonc / Retainer ring	2
75	Rondelle frein / Brake washer	2
76	Rondelle / Washer	2
79	Bouchon / Plug	2
83	Bouchon de purge / Bleed plug	2
85	Ecrou / Nut	1
90	Carstick	1
94	Porte joint / Seal holder	1
98	Rondelle / washer	1
99	Vis / Screw	2

AT : Arbre Traversant / Through shaft