


Exploded view / parts list:

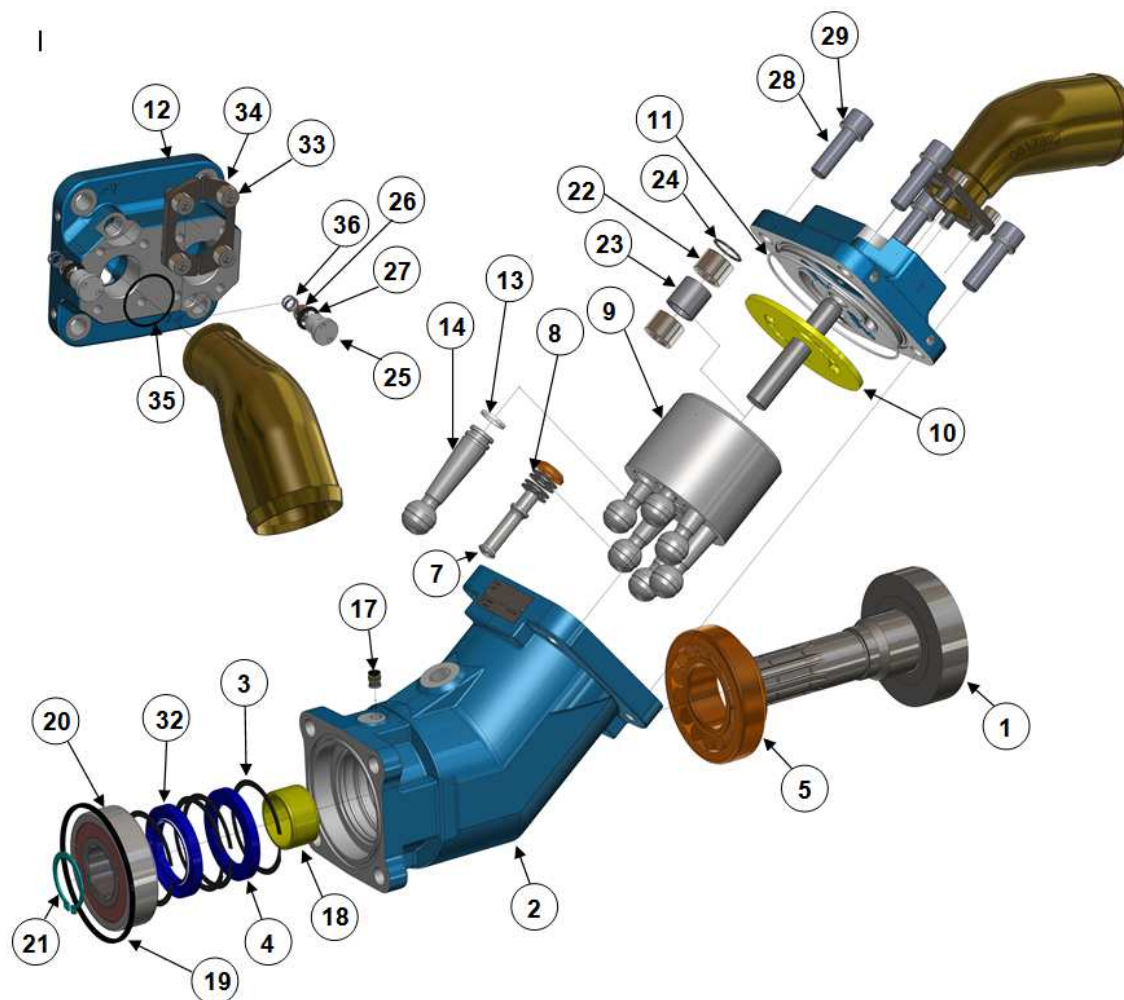

Part number	Designation	Qty / pump
1	Shaft	1
2	Housing	1
3	Spring ring	4
4	Nitrile lip seal	1
5	Tapered bearing	1
7	Guide	1
8	Belleville washer	4
9	Barrel	1
10	Distribution plate	1
11	O-ring	1
12	Rear cover	1
13	Ring	7
14	Piston	7
17	Carstick plug	1
18	Bushing	1
19	Square seal	1
20	Ball bearing	1
21	Retainer ring	1
22	Needle bearing	2
23	Shim	1
24	Retainer ring	1
25	Plug	2
26	Ball	2
27	O-ring	2
28	Vis	4
29	Nord Lock washer	4
32	Viton lip seal	1
33	Screw	4
34	Half flange	2
35	O-ring	1
36	Spring	2
38	Plastic tube	1