

## MAXIMUM DISPLACEMENT SETTING SCREW

The TXV pumps from 40 to 150 cc/rev are made as standard to be able to use a setting screw:

- Reference : **0518386** for TXV 40 to 120 pumps
- Reference : **0523899** for the TXV 130 and TXV 150 *indexable*


The pump displacement can thus be adjusted to exactly what is needed.

### ► How to set maximum displacement

Unscrew **1** completely, loosen nut **3** and screw **2** to obtain dimension **X** on graph below, and the corresponding displacement (see figure).

- For TXV 150 *indexable*: 1 turn of the screw changes the displacement by 7.5 cc.
- For TXV 130 *indexable*: 1 turn of the screw changes the displacement by 6.5 cc.
- For TXV 120: 1 turn of the screw changes the displacement by 9 cc.
- For TXV 92 to TXV 40: 1 turn of the screw changes the displacement by 8 cc.

TXV 40-120

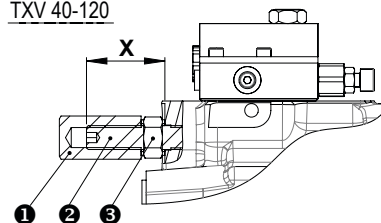

TXV 130-150

