



Per consentire una corretta lubrificazione interna del supporto prolunga, è necessario rimuovere il paraolio della PTO prima del montaggio.

In order to allow a proper extension adaptor internal lubrication, it is necessary to remove the PTO oil seal before mounting.

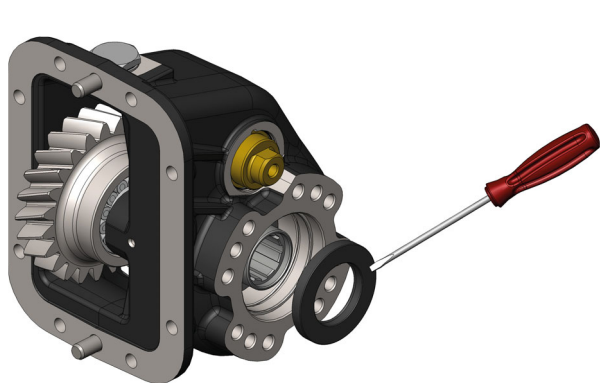

- 1** Togliere il paraolio della PTO
Remove the PTO oil seal

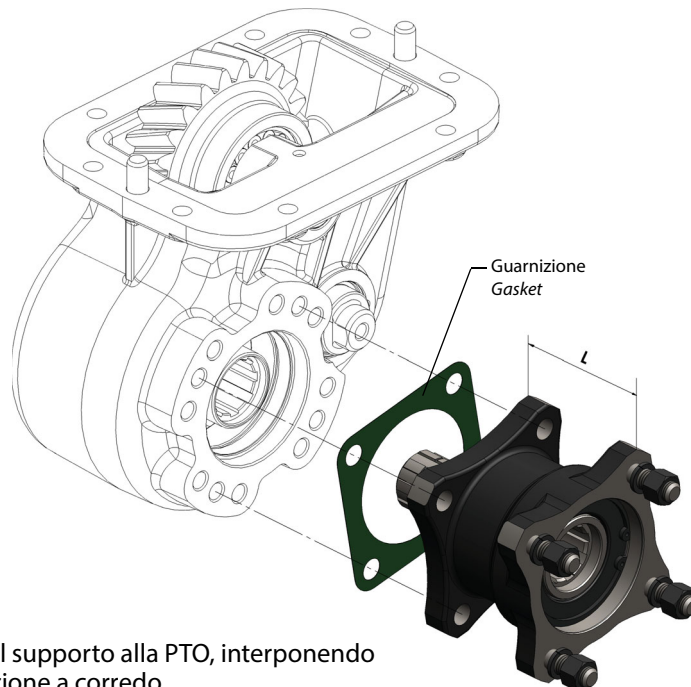

- 2** Montare il supporto alla PTO, interponendo la guarnizione a corredo.
Mount the adaptor on the PTO and interject the gasket provided.


Codice / Code	L
10300500079	85 mm
10300500097	125 mm

Applicazione alternativa / Alternative installation

Il supporto può essere montato su pompe ISO per sostenere il carico radiale indotto da applicazioni quali ingranaggi a sbalzo, pulegge o flange. In questi casi devono essere montati anche i seguenti particolari come indicato a disegno:
The adaptor can be mounted on ISO pumps in order to bear the radial load generated by loose gears, pulley or flanges. In those cases you must install also the following components as indicated in the drawing:

- Guarnizione paraolio, q.tà 1pz, cod. **50602845726**
- Anello seeger, q.tà 2 pz, cod. **50100002729**

- Oil seal, q.ty 1pc, cod. **50602845726**
- Circlip, q.ty 2 pcs, cod. **50100002729**

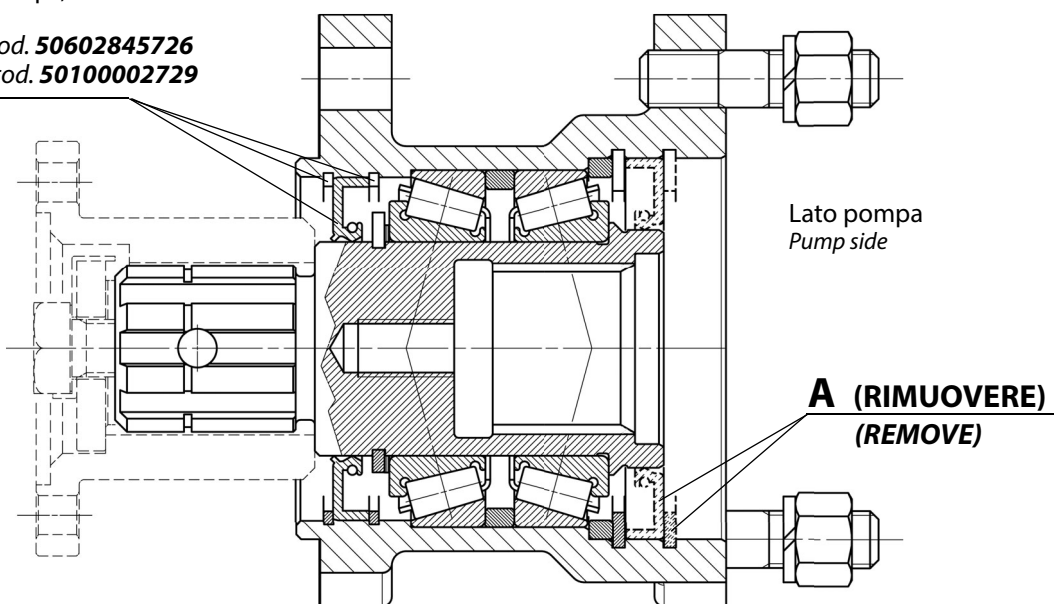

(A) É fondamentale rimuovere:

- paraolio della pompa
- paraolio e seeger del supporto per consentire la corretta lubrificazione dei cuscinetti.

(A) It is mandatory to remove:

- pump's oil seal
- adaptor's oil seal and circlip in order to allow the bearings to be lubricated.