


**SUPPORTO INCLINATO N-FORCE
CON STAFFA PER SCANIA R
BRACKET KIT FOR N-FORCE
FOR SCANIA R**




CODICE ORDINAZIONE
ORDER CODE

100-002-70261

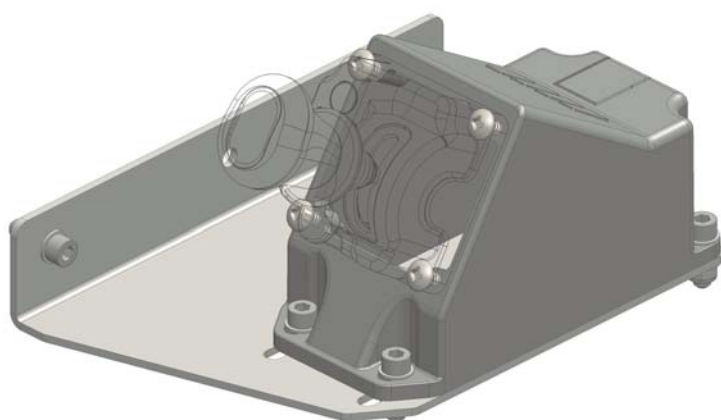

Kit appositamente studiato per fissare i deviatori pneumatici serie N-FORCE sul supporto sedile del veicolo SCANIA R.

Assembly kit especially designed to mount air controls series N-FORCE on the bracket driver's seat of SCANIA R.

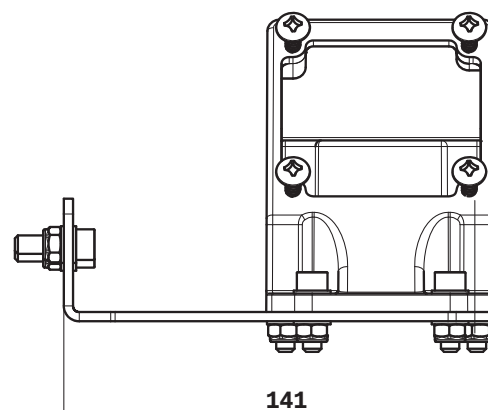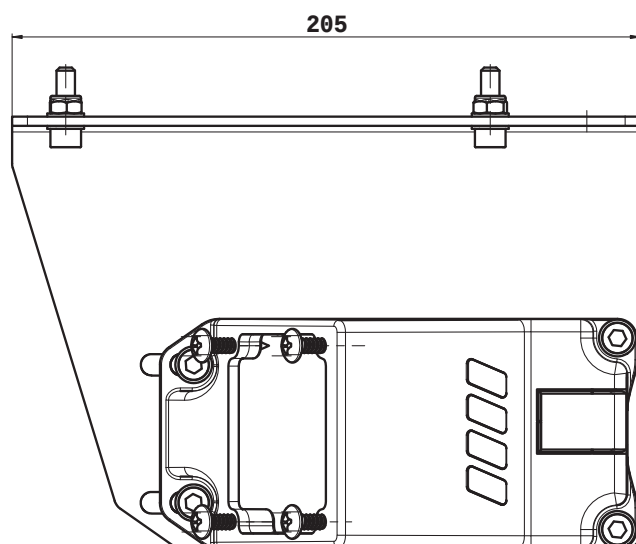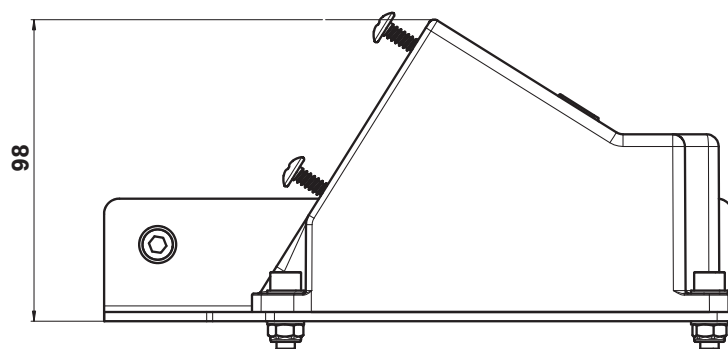

Data: Venerdì 08 febbraio 2013

Codice foglio: 997-100-00261 Rev: //

pag.1

O.M.F.B. S.p.A. Hydraulic Components

We reserve the right to make any changes without notice.


Edition 2013.02 No reproduction, however partial, is permitted.

Via Cave, 7/9 25050 Provaglio d'Iseo (Brescia) Italy Tel.: +39.030.9830611

Fax: +39.030.9839207-208 Internet: www.omfb.it e-mail: info@omfb.it

OMFB
HYDRAULIC COMPONENTS

COMPANY WITH
QUALITY SYSTEM
CERTIFIED BY DNV
= ISO 9001 =

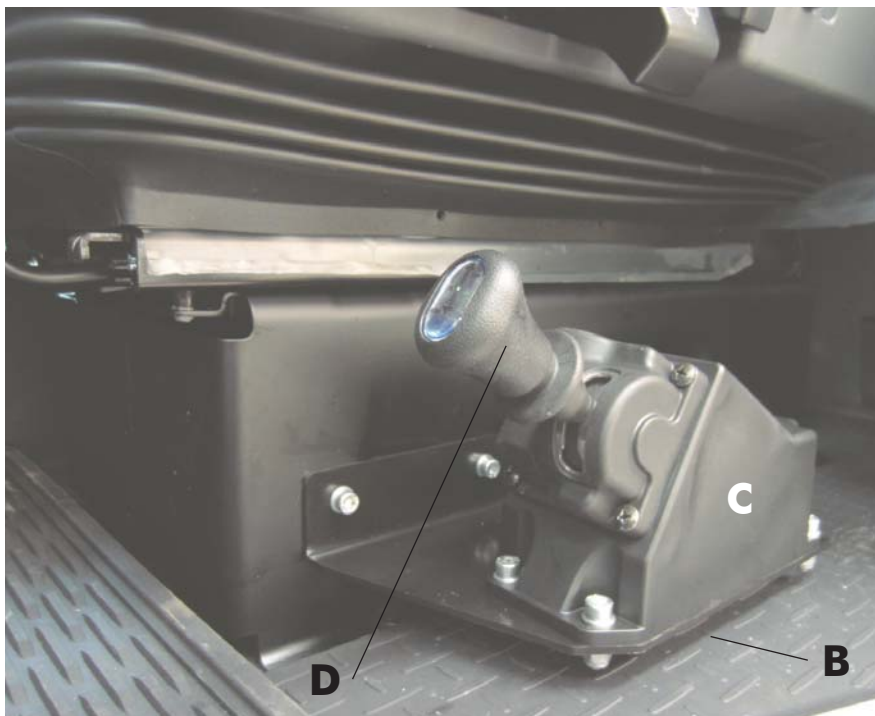

1 - Montare la piastra **B** al sedile. Montare il supporto **C** sulla piastra **B**. Collegare i tubi dell'aria al deviatore pneumatico N-FORCE **D** e fissarlo al supporto **C** con le 4 viti autofilettanti.

1 - Mount the plate **B** to driver's seat. Mount the bracket **C** on plate **B**. Connect the air pipe into the air control N-FORCE **D** and fix it on the bracket **C** by using the 4 self-tapping screws.

Data: Venerdì 08 febbraio 2013



ATTENZIONE: tutte le operazioni relative al montaggio, devono essere eseguite **IN SICUREZZA** secondo le norme vigenti.

ATTENTION: all the operations related to the assembling of these components have to be carried out in respect of the current **SAFETY** regulations in place